


Rear Door Speakers

NOTES:

Please read first

• Instructions show factory size speakers or speakers with adaptor brackets only. Cutting or fabricating (not shown) will be required for other speaker sizes.

1. Pry off **screw cover** at bottom of **door pull cup**. Remove two (2) exposed 7mm screws from bottom of cup.
2. Pry from front and rear edge of **power options switch panel**. Pull out panel, disconnect wiring harnesses and remove panel.
3. Pry around sides and bottom of **door panel** to release eight (8) plastic clips. Lift door panel and pull to remove.
4. Remove four (4) Torx T-15 screws from speaker. Pull out speaker, disconnect and remove.
5. Use pliers to break off **line-up tabs** on **factory speaker bracket** to allow new speaker to fit flush against bracket (Inset).
6. Secure new speaker to speaker adaptor bracket following instructions supplied with brackets. Break off the three (3) **square mounting tabs** on **speaker/bracket assembly** (Inset). **Note:** These tabs are not used in this application.
7. Connect speaker wiring adaptor of replacement speaker to vehicle speaker connector. Secure **speaker/bracket assembly** with screws previously removed.
8. Test speaker operation and reinstall door panel by reversing removal steps.

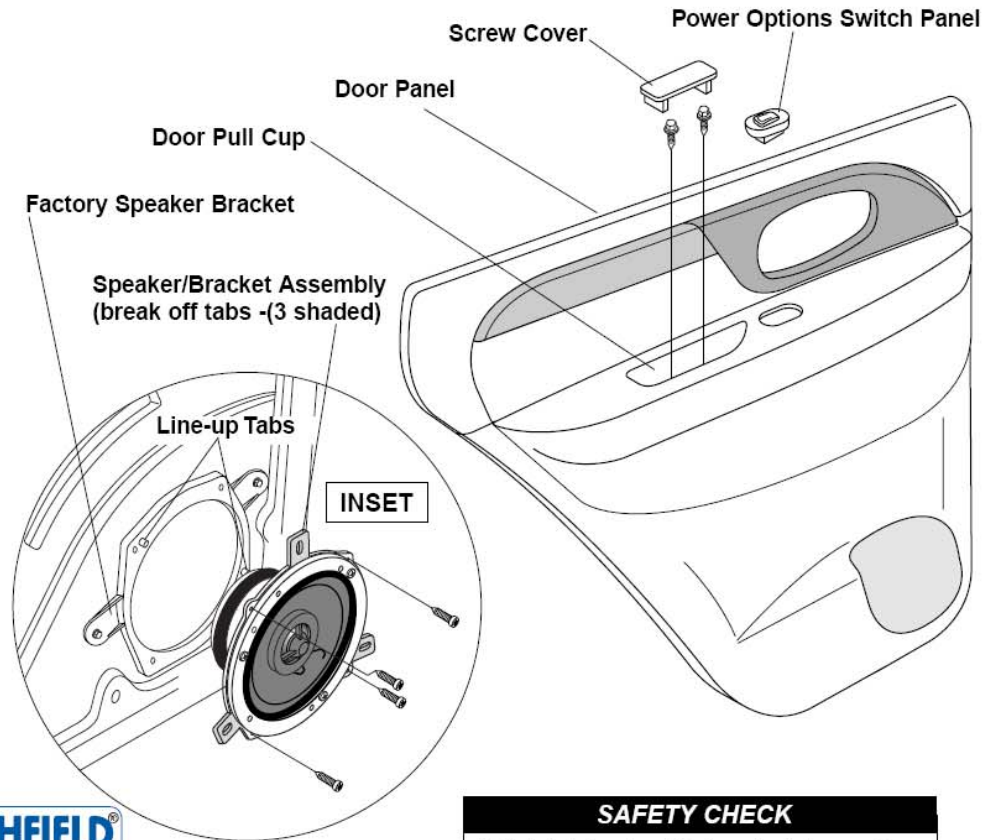

SAFETY CHECK

- ✓ Check that wires do not interfere with window operation.
- ✓ Test door lock operation.

 1-800-955-9094
Technical Service

CRUTCHFIELD
CRUTCHFIELD.COM
Copyright 2006 Crutchfield Corporation